



PART LIST


1	10	9	œ		7	6	Ŋ		4	ω	Ν		_	Ref#
26"Closet side board	52"SS work plate	26"Skirting board	26"Closet frame	screw (M8X20)	HEX socket head cap	Pipe (60X30mm)	26"Hanger board	(M6X12,stainless)	Truss head screw	Pipe (30X30mm)	26"Cabinet frame	flange screw (M6X25)	Hexagon bolt with	Description
47389	47383	47289	47288			47283	47376			47284	47280			Part#
1 pc	1 pc	2 pcs	1 pc		12 pcs	1 pc	2 pcs		16 pcs	2 pcs	1 pc		12 pcs	QTY




ASSEMBLY INSTRUCTIONS

1.INSTALL ADJUSTABLE SHELF

bolts into the side panels. Place the shelf on the bolts. Make sure slot B go into box first. the tongues on both side panels. Insert the Decide the height of the adjustable shelf onto

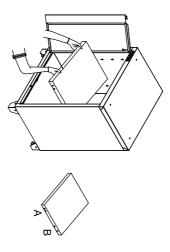

Simply position the pipes over the holes on the cabinets and attach with the bolts provided. Tighten HEX socket head cap screws(M8X20) securely.

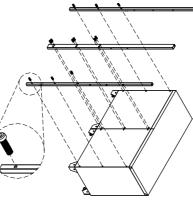



2.INSTALL PIPES

3.INSTALL HANGER BOARD

Simply position the hanger board over the holes and attach with the bolts provided. Tighten truss head screws(M6X12,stainless)

securely.

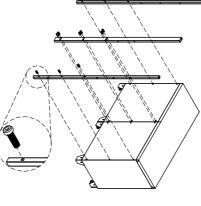

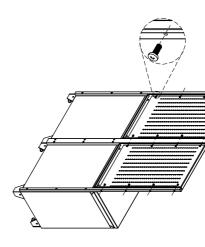


WORK PLATE 5.PRE-DRILL HOLES OF SS


4.ADJUST LEVELER

Adjust the levelers and make the whole unit to

stable state.

holes). the SS work plate for easily installing. Repeat the steps for the back of SS work plate(only four Pre-drill eight small holes under

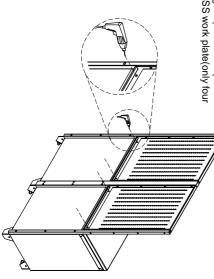


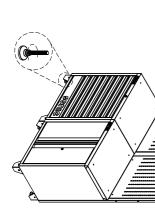





6.INSTALL SS WORK PLATE

Position the SS work plate on the top of cabinets. Remove the top drawer of cabinet and open the bolt with flange screw(M6X25) through the top of cabinet, and into 2-door cabinet. Insert the Hexagon drawers. Tighten securely. Reinstall the the bottom of the SS worktop.

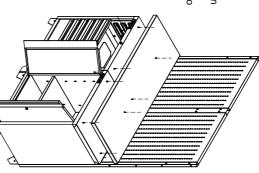



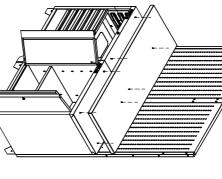

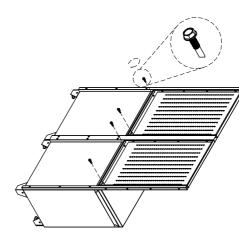

7.INTALL SKIRTING BOARDS

(M6X12,stainless) through the legs. Tighten securely. Repeat the steps for other skirting Position the skirting boards on the legs of cabinets. Insert the truss head screw boards.

