



#### PART LIST


26"0	26''C	52"S	26"S	26"C	flanc	Hexa	f# Desc
26"Closet frame	26"Closet side board	52"SS work plate	26"Skirting board	26"Cabinet frame	flange screw (M6X25)	Hexagon bolt with	Description
47288	47389	47383	47289	47280			Part#
1 pc	1 pc	1 pc	2 pcs	1 pc		8 pcs	QTY






# **1.INSTALL ADJUSTABLE SHELF**

Decide the height of the adjustable shelf onto the tongues on both side panels. Insert the bolts into the side panels.Place the shelf on the bolts. Make sure slot B go into box first.

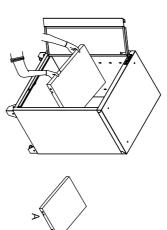

## **4.INSTALL SS WORK PLATE**


Position the SS work plate on the top of cabinets. Remove the top drawer of cabinet and open the 2-door cabinet . Insert the Hexagon bolt with flange screw(M6X25) through the top of cabinet, and into the bottom of the SS worktop. Tighten securely. Reinstall the drawers.

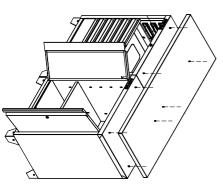

## ASSEMBLY INSTRUCTIONS


### 2.ADJUST LEVELER

Adjust the levelers and make the whole unit to stable state.

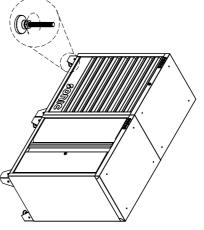

#### 3.PRE-DRILL HOLES OF SS WORK PLATE Pre-drill eight small holes under

Pre-drill eight small holes under the SS work plate for easily installing.

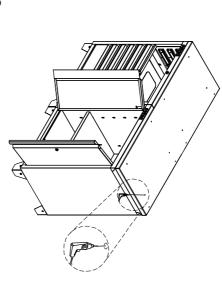

## **5.INTALL SKIRTING BOARDS**

Position the skirting boards on the legs of cabinets. Insert the truss head screw (M6X12, stainless) through the legs. Tighten securely. Repeat the steps for other skirting boards.

