




9	∞	7	σ		4	ω	2		_	Ref#
26"SS work plate 26"Closet side board	screw (M8X20) 26"Skirting board	HEX socket head cap	26"Hanger board	(M6X12,stainless)	Truss head screw	Pipe (30X30mm)	26"Cabinet frame	flange screw (M6X25)	Hexagon bolt with	Description
47377 47389	47289		47376			47284	47280			Part#
1 pc	1 pc	6 pcs	1 pc		8 pcs	2 pcs	1 pc		12 pcs	QTY

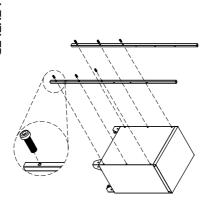


1.INSTALL PIPES
Simply position the pipes over the holes on the cabinets and attach with the bolts provided. Tighten HEX socket head cap screws(M8X20) securely.



3.ADJUST LEVELER


Adjust the levelers and make the whole unit to stable state.

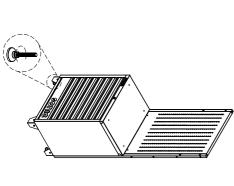

ASSEMBLY INSTRUCTIONS


2.INSTALL HANGER BOARD

Simply position the hanger board over the holes and attach with the bolts provided. Tighten truss head screws(M6X12,stainless) securely.

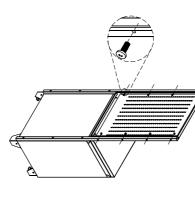

4.PRE-DRILL HOLES OF SS WORK PLATE

Pre-drill four small holes under the SS work plate for easily installing. Repeat the steps for the back of SS work plate(only two holes).

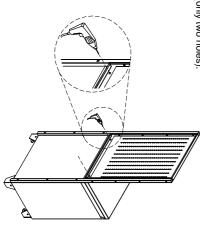







5.INSTALL SS WORK PLATE

Position the SS work plate on the top of cabinets. Remove the top drawer of cabinet. Insert the Hexagon bolt with flange screw(M6X25) through the top of cabinet, and into the bottom of the SS worktop. Tighten securely. Reinstall the drawers.

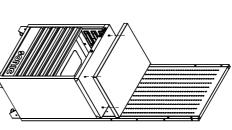

Insert the Hexagon bolt with flange screw(M6X25) through the back of hauger boards, and into the side of SS work plate. Tighten securely.

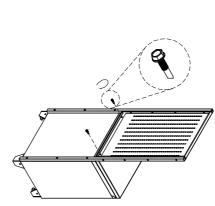

6.INTALL SKIRTING BOARDS

Position the skirting boards on the legs of cabinets. Insert the truss head screw (M6X12, stainless) through the legs. Tighten securely. Repeat the steps for other skirting boards.

